

# PI105

PIAGGIO Porter – Benzina – Bifuel Eco-Power e Green-Power – Euro 5

Dal 2011 – motore DONGAN / Multitec – 1308 cc – 4 cilindri – senza A/C

Since 2011 – engine DONGAN / Multitec – 1308 cc – 4 cylinders – without A/C

## Istruzioni di montaggio kit innesto elettromagnetico

- Montare innesto elettromagnetico e pompa nella staffa (foto 1)
- Smontare filtro aria motore
- Utilizzando la vite con rondella V , la fascetta F e il distanziale S fissare il cavo dell'impianto elettrico per evitare interferenze con la puleggia dell'innesto elettromagnetico (foto 2)
- Collegare i tubi alla pompa
- Montare la staffa completa di innesto elettromagnetico e pompa nei punti A B C D (foto 3 4 5)
- Inserire la cinghia nella puleggia innesto elettromagnetico poi nella puleggia motore (foto 6 )
- Montare puleggia tendicinghia (foto 8)
- Rimontare filtro aria motore (foto 9 10)

## Electromagnetic coupling kit installation instructions


- Mount electromagnetic clutch and pump into the bracket (photo 1)
- Disassemble engine air filter
- Using the screw with washer V, the band F and spacer S fix the electrical cable to avoid interference to the electromagnetic clutch pulley (photo 2)
- Connect the pipes to the pump
- At the points A B C D , install bracket complete with electromagnetic clutch and pump (photo 3 4 5)
- Insert the belt in the electromagnetic clutch pulley then in the motor pulley (photo 6 )
- Install idler pulley (photo 8)
- Reassemble engine air filter (photo 9 10)



1




2

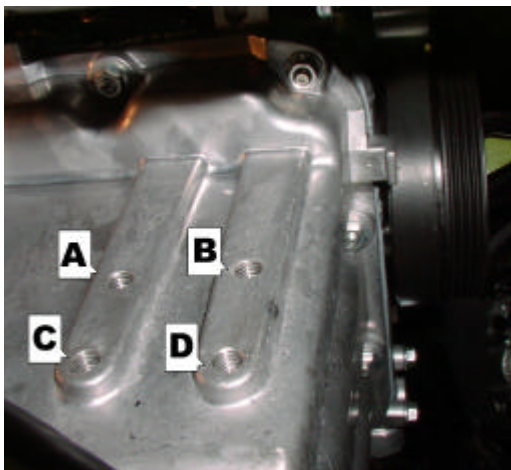


3




4

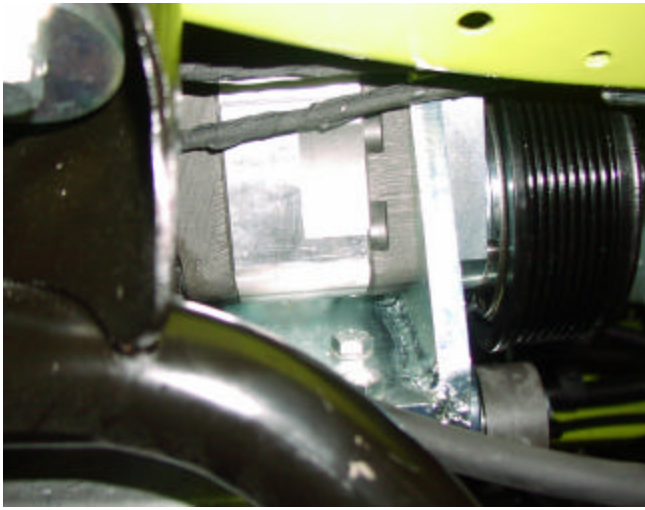

5

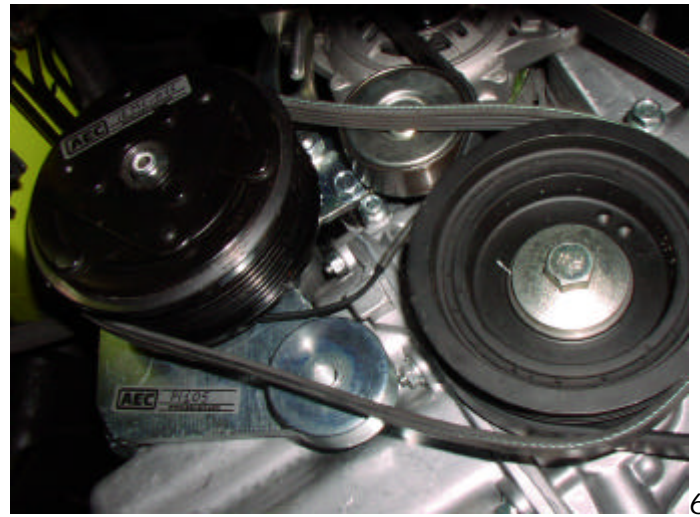

6

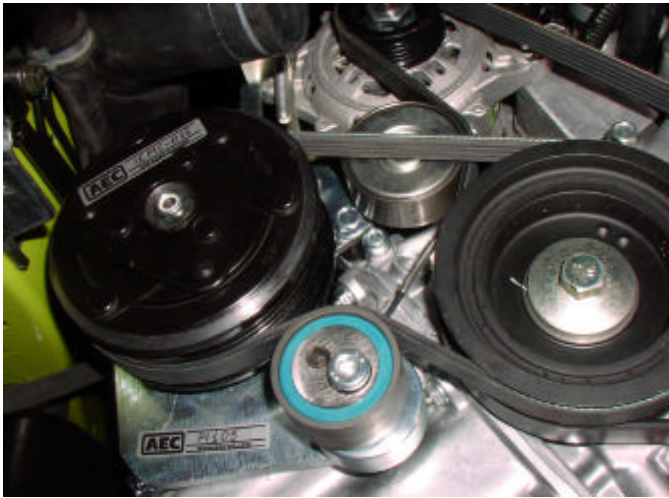

8

